

# irit®


## MANUAL INSTRUCTION ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

### Electric Shaver Бритва электрическая аккумуляторная

IR-3019

#### Description

1. Cover
2. Foil
3. Mark of correct positioned grid
4. Shaving block
5. Lock button of shaving block
6. Body
7. Switch button
8. Discharge indicator
9. Charging cable
10. Cleaning Brush

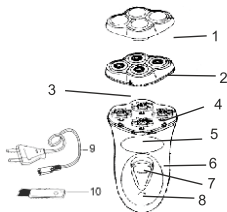

#### Attention!

The appliance is not intended for professional use.

#### IMPORTANT SAFEGUARDS

- Before commissioning this device please read the instruction manual carefully.
- Check that the main voltage corresponds to the voltage indicated on the rating label
- Always unplug the appliance before cleaning and when device not in use
- Under no circumstances must the device be placed in water or other liquid, or come into contact with such.
- Do not use the device with wet or moist hands.
- Do not allow children play with the appliance
- Do not leave the appliance unattended
- Do not use accessories which were not supplied with appliance
- Use the power cord or adapter is specifically designed for this appliance.
- Do not attempt to repair the device by yourself. If you encounter problems, please contact the nearest service center
- Do not use the machine in inflammations of the skin.
- This appliance should not be operated by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.

#### Charging

- Before using shaver or after a long break in its operation requires an 8-hour battery charge
  - Plug the charger into the charging socket from the bottom of body, then plug the charging into net
  - Charging shaver can be used during 30 minutes
  - Recommended charge duration – 8-16 hours
  - Charged shaver can be used during 7 days
- Warning!** Do not charge battery more than 20 hours, with temperature low than 10 C and more than 40 C, it may cause to a reduction of its electric capacity

#### Operation

- Remove the lid and press the power button
- Lightly touching the skin, move shaving heads in the direction opposite of hair growth
- After shaving finished, shaver should be switched OFF

#### Trimmer operation

- Trimmer is intended for trimming sideburns and mustache care
- Slide the switch of trimmer upwards
- For switching of device push the button (7)
- Place the trimmer at the correct angle to the skin and slowly move it down, trimming mustache or sideburns
- Clean the trimmer after each operation with the brush
- Lubricate trimmer with drop of special oil every 6 months

#### Cleaning

For long working life of shaver regularly clean it in accordance with manual instruction.

1. Push the Lock button of shaving block (5) and remove it.
2. Clean shaving block inside and outside with brush
3. Set shaving block on its place, close the lid and take it away for storage
4. Recommended clean shaving heads one time in 2 months
5. Remove shaving block. Turn the wheel anticlockwise and remove the retaining frame
6. Remove and clean shaving heads
7. Clean rotating and fixed blades with brush
8. After cleaning set shaving heads into shaving block, install retaining frame and turn wheel to a clockwise. Set the shaving block to unit.

#### Attention!

- Clean shaving heads under the water jet
- Do not wipe shaving heads with a towels or cloth to avoid damage of shaver.
- Let dry shaving heads
- After cleaning cover shaving head with a protection cap

#### Replacement of shaving heads

- For optimal shaving results it's necessary to replace shaving heads:
- Switch off the shaver.
- Push the lock button (5) and remove shaving block
- Turn the wheel anticlockwise and remove the retaining frame
- Replace shaving heads and set retaining frame, and turn wheel to a clockwise. Set the shaving block to unit.

#### RATED PARAMETERS:

Power – 3W  
Voltage 220 -240V/50Hz

Service life 2 years

The date of manufacture is marked on the packaging.  
The importer retains his right to make changes in appearance and complete the item without preliminary notification to the customer.  
For household usage only.  
Do not leave unattended!

Made in China



## Гарантийный талон №

Наименование изделия \_\_\_\_\_

Номер модели \_\_\_\_\_

Серийный номер « » \_\_\_\_\_ 20 г.

М.П.  
торгующей  
организации

#### Условия гарантии:

Уважаемый покупатель! Вы приобрели изделие, произведенное под ТМ "IRIT". Данный талон дает Вам право на устранение дефектов изделия в авторизованных сервисных центрах в течение 12 месяцев со дня продажи. Все условия гарантии осуществляются в соответствии с действующим законодательством. Проследите, чтобы данный талон был правильно заполнен и имел печать торгующей организации.

В случае возникновения неисправностей техники в течение гарантийного срока, Вы можете обратиться в авторизованный сервисный центр, адреса и телефоны, которых указаны на обороте гарантийного талона. Сервисный центр проведет ремонт или вышлет акт, в случае невозможности ремонта данного изделия. На основании этого акта Вы можете обратиться в торгующую организацию, в которой было приобретено изделие, для обмена.

После истечения гарантийного срока сервисные центры, указанные в гарантийном талоне, всегда готовы предложить Вас свои услуги по ремонту бытовой техники "IRIT".

Гарантия не включает в себя периодические обслуживание, установку, настройку и чистку изделия, порядок которых изложен в Инструкции по эксплуатации.

#### Гарантийное обслуживание не производится при:

- несоблюдении правил эксплуатации изделия, установленных Инструкцией по эксплуатации;
  - утрате гарантийного талона;
  - ремонте неуполномоченными на это лицами, а также при других, непредусмотренных инструкцией вмешательствах;
  - механических повреждениях, возникших по вине потребителя;
  - использовании изделия в целях, для которого оно не предназначено;
  - внесении изменений и/или исправлений в текст данного талона.
- С внешними данными и комплектацией товара ознакомлены: \_\_\_\_\_ (подпись)

Содержание гарантийный талон и чек контрольно-часовой машины на изделие. Без предоставления данного талона его неправомерно заполнение и/или отсутствия печатей торгующей организации на талоне и корешках, претензия к качеству не принимаются

irit®

КОРЕШОК К ТАЛОНУ № \_\_\_\_\_

Модель: \_\_\_\_\_

Дата продажи « » \_\_\_\_\_ 20 г.

Наименование \_\_\_\_\_

Модель \_\_\_\_\_

Сер. номер \_\_\_\_\_

Ф.И.О. клиента \_\_\_\_\_

Телефон \_\_\_\_\_

Адрес \_\_\_\_\_

М.П.  
торгующей  
организации

irit®

КОРЕШОК К ТАЛОНУ № \_\_\_\_\_

Модель: \_\_\_\_\_

Дата продажи « » \_\_\_\_\_ 20 г.

Наименование \_\_\_\_\_

Модель \_\_\_\_\_

Сер. номер \_\_\_\_\_

Ф.И.О. клиента \_\_\_\_\_

Телефон \_\_\_\_\_

Адрес \_\_\_\_\_

М.П.  
торгующей  
организации

